


HP® M506/MFP M527 CF-287A/X TONER CARTRIDGE REMANUFACTURING INSTRUCTIONS

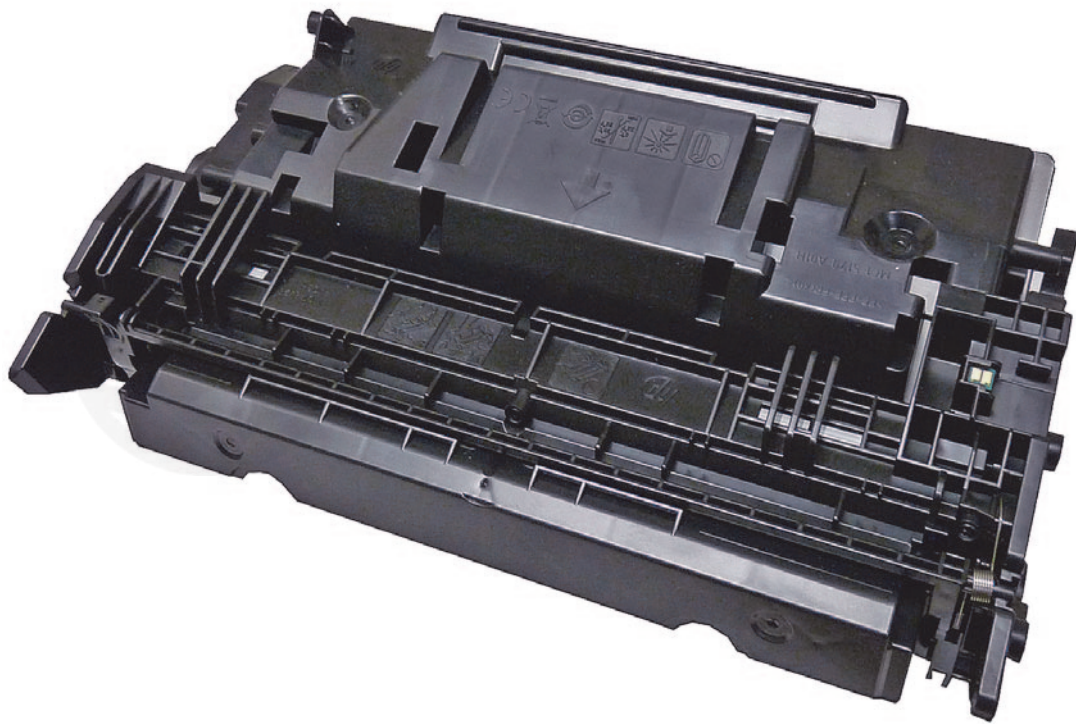

HP CF-287A/X TONER CARTRIDGE

REMANUFACTURING THE HP LASERJET ENTERPRISE M506/MFP M527 CF-287A/X TONER CARTRIDGE


By Mike Josiah and the Technical Staff at UniNet

First introduced in October 2015, the LaserJet Enterprise M506 series of laser printers is based on 45ppm, 1200dpi engine that comes standard with 512Mb Memory (expandable to 1.5GB). The first page out is stated to be as fast as 5.9 seconds.

Two different cartridges are available for this series, the CF287A rated at 9,000 pages, and the CF287X rated for 18,000 pages.

The CF287A cartridges lists for \$214.99 and the CF287X lists for USD\$290.99*

Pricing in U.S. American Dollars, as of 1/25/2016

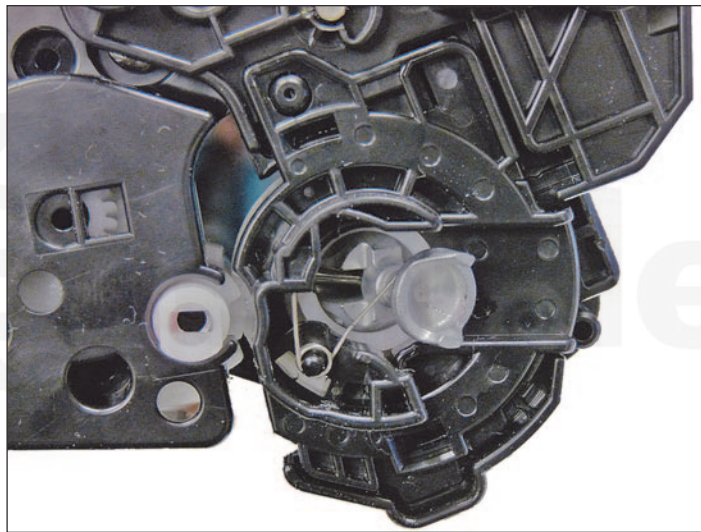

The cartridges are similar in design to the M402 series, but are not interchangeable.

There are some significant changes to the shell and toner hopper.

Shown is the dongle gear used that we are all familiar with.

PRINTERS RELEASED IN THIS SERIES SO FAR



LaserJet Enterprise M506n
LaserJet Enterprise M506dn
LaserJet Enterprise M506x
LaserJet Enterprise MFP M527dn
LaserJet Enterprise MFP M527c
LaserJet Enterprise MFP M527f
LaserJet Enterprise MFP M527z

SUPPLIES REQUIRED

1. Low yield toner for use in HP-M506 CF287A cartridge (9,000 pages, 325g)
2. High yield toner for use in HP-M506 CF287X cartridge (18,000 pages, 630g)
3. Replacement chip
4. New drum (Optional)
5. Wiper blade (Optional)
6. Doctor blade (Optional)
7. Magnetic roller (Optional)
8. Sealing strip (Optional)
9. Cotton swabs
10. Isopropyl alcohol
11. Drum padding powder
12. Conductive grease



TOOLS REQUIRED

1. Jeweler's screwdriver
2. Phillips head screw driver
3. Small common screwdriver
4. X-Acto type razor knife
5. Flush-cutting wire cutters
6. Tools required to remove and install used OEM gears
7. Metal 1/16" rod about 18" long (from local hardware store)
8. Needle nose pliers
9. Super-glue or equivalent
10. Rubber mallet
11. Ohm (continuity) meter

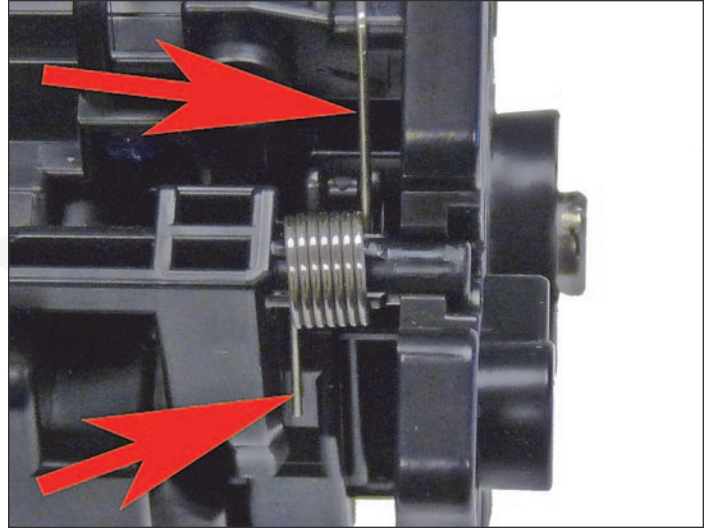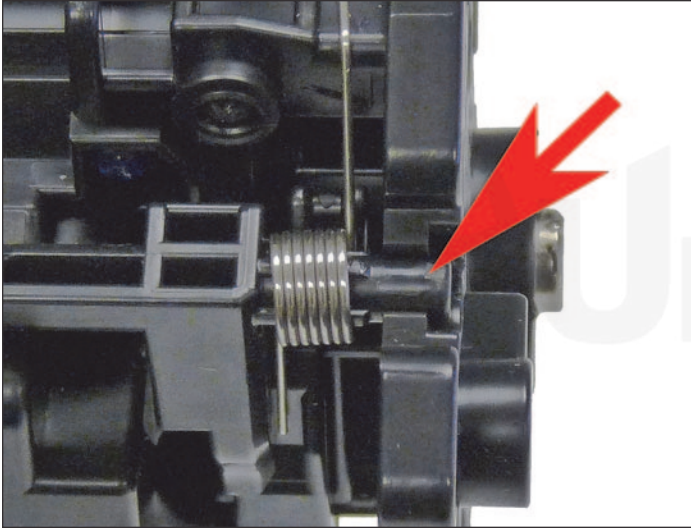


1. Remove the drum cover by prying up on each end. Note the spring position so that it can be replaced later.

There are two pins that need to be removed to open the cartridge. The best and easiest way to remove them without damaging the cartridge is to cut two small slots in the plastic next to each of them.

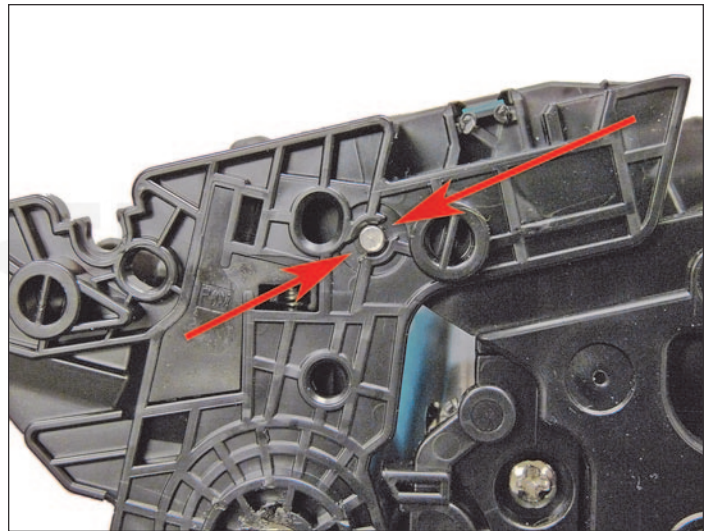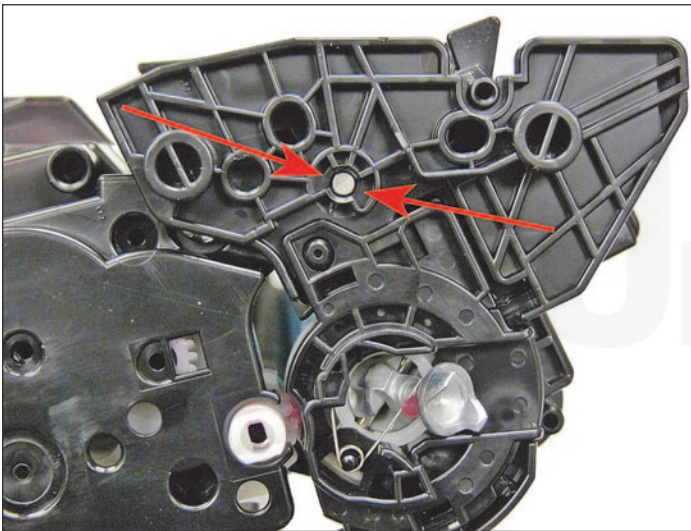


2. There are two small slots on opposite sides of each pin.

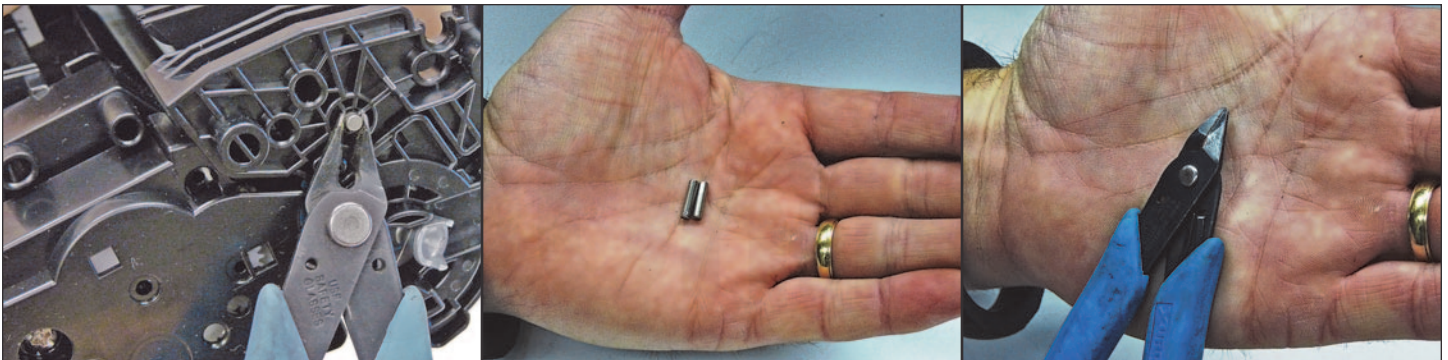


3. Grab the pins with a pair of pointed flush-cutting wire cutters, and remove.

Flush-cutting wire cutters have blades that are flat on the bottom side. Normal wire cutters have curved blades.


The flush-cutting kind are better for grabbing recessed pins. Note that the pins for both sides are the same.

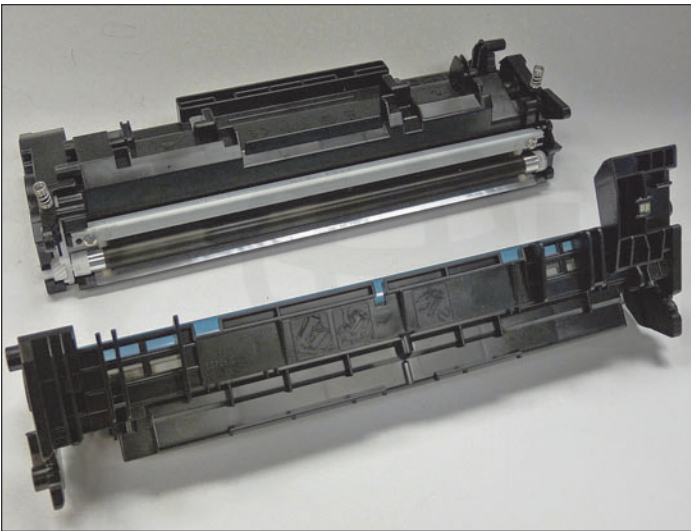


4. Separate the two halves.

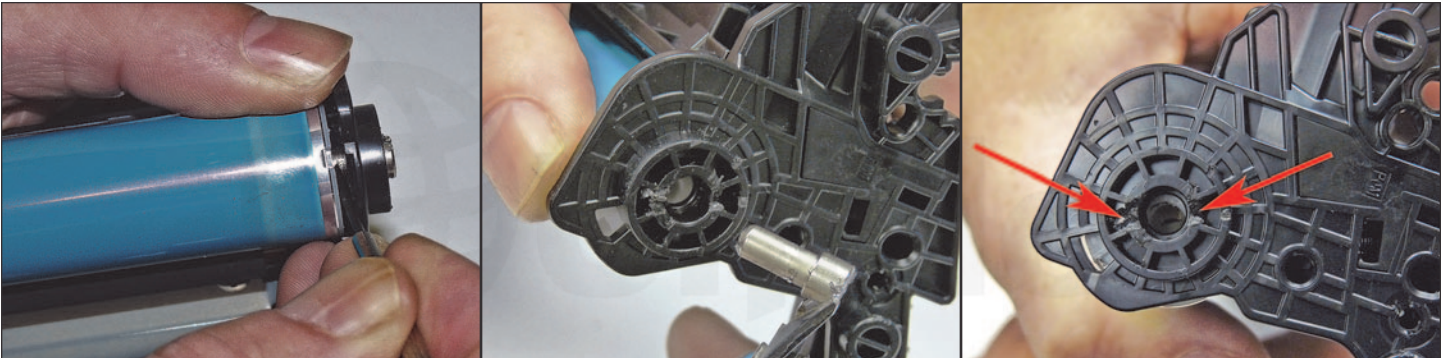

5. With a flat head screwdriver, press the drum axle pin out from the inside of the cartridge wall as shown. There is NOT a small shoulder as in older versions. Press the axle out just enough so that you can grab it with the flush-cutting wire cutters. You may have to make two small cuts on each dies of the pin from the outside in order for the cutters to be able to grab it.

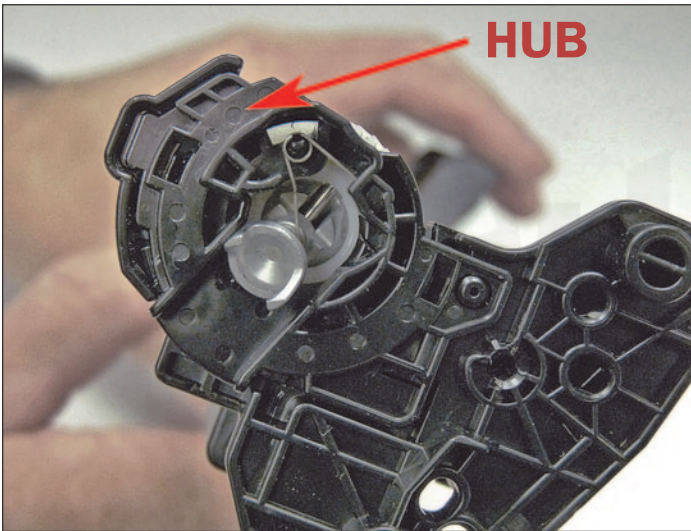


The drum hub on the opposite side is welded. The weld can be broken or drilled out, but there is a good chance that the hub will either warp if pried off, or will be hard to align if drilled out.

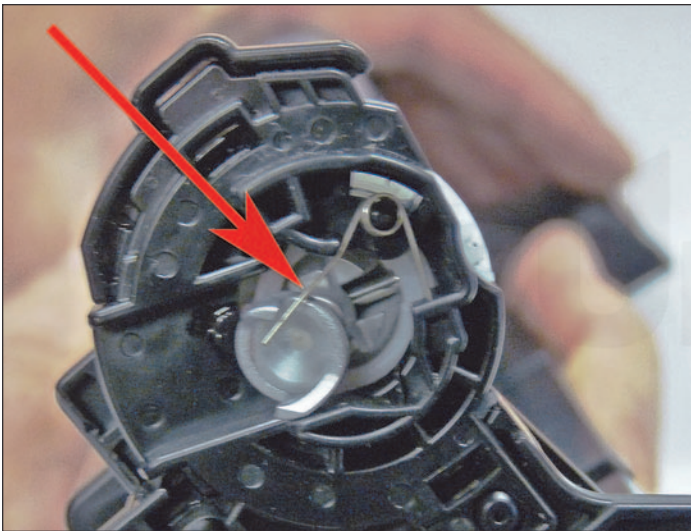


6. The drum dongle gear has a spring that holds it off to one side (necessary for it to engage the printer).

Release the tail of the spring off the gear and remove the drum.

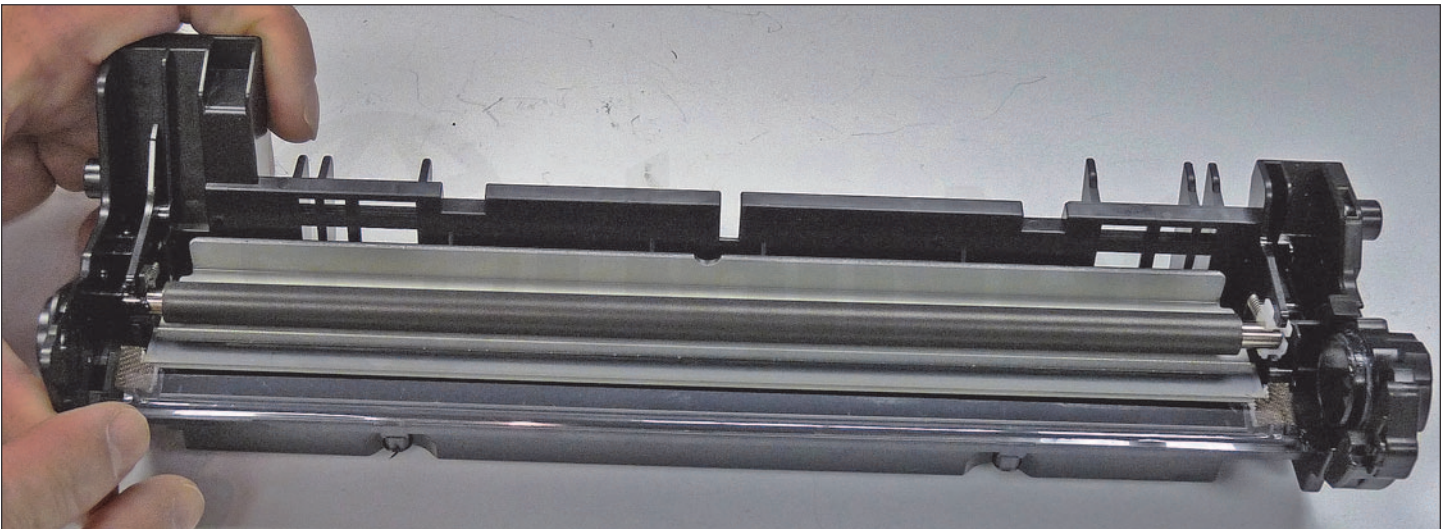


7. Remove the PCR and clean with your standard PCR cleaner.

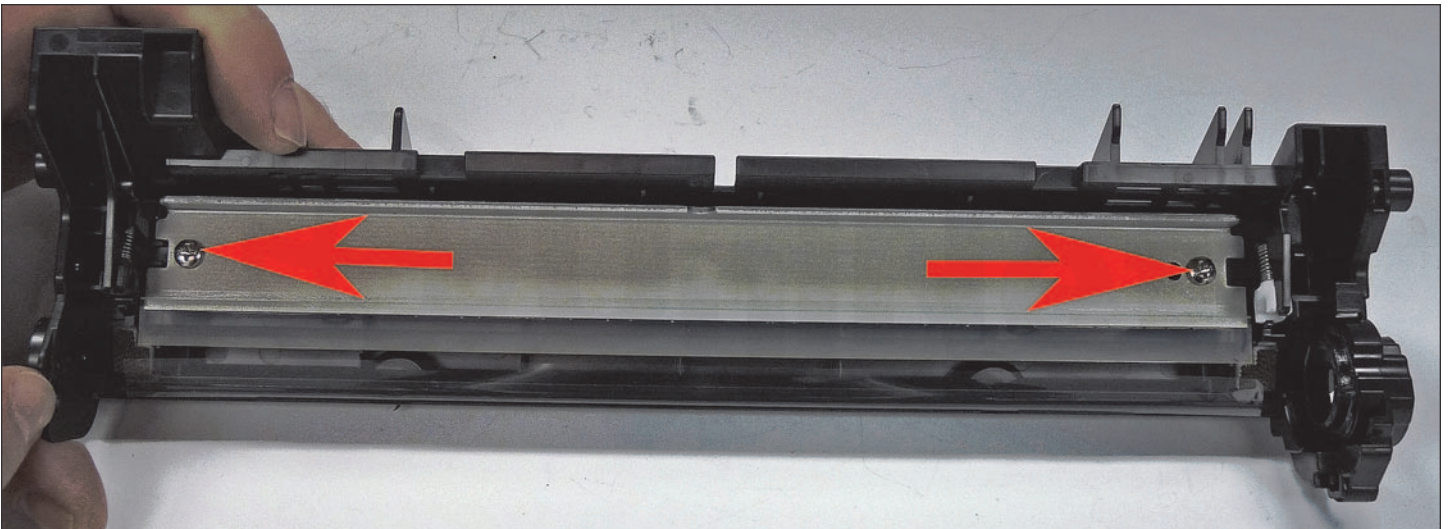


8. Remove the two screws and the wiper blade.

There is an adhesive seal that hold the blade in place. Carefully lift it up.

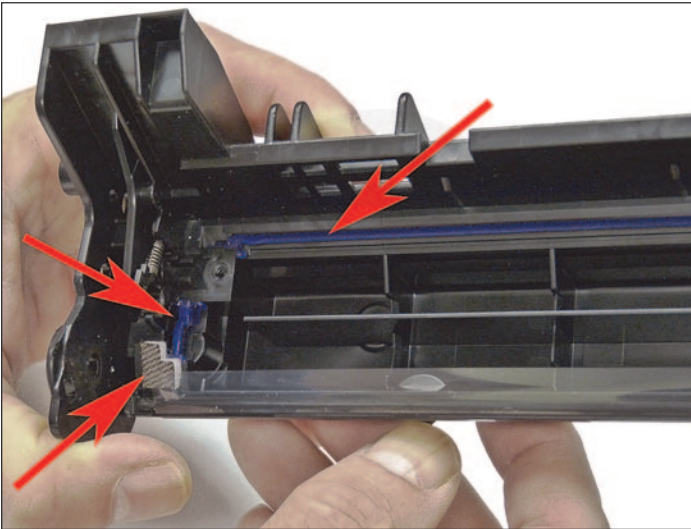


9. Clean out the waste toner, make sure the seals are clean. If toner gets on the blade seal it can be cleaned with alcohol to activate the adhesive again.

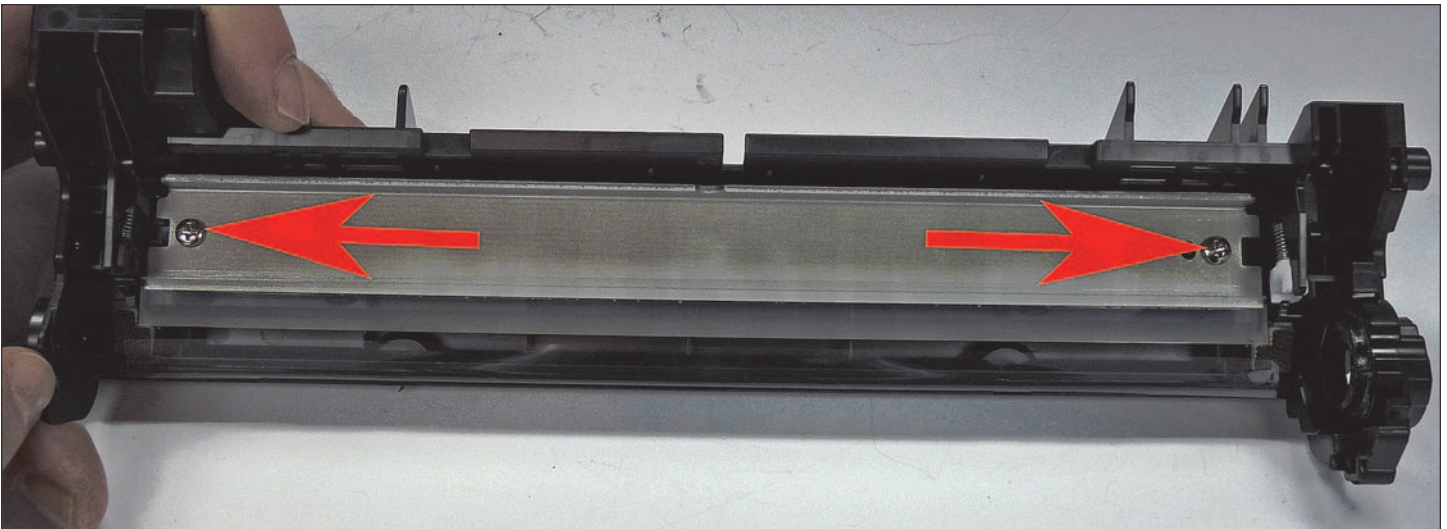


10. Coat the wiper blade with your preferred lubricant.

Install the blade and two screws.

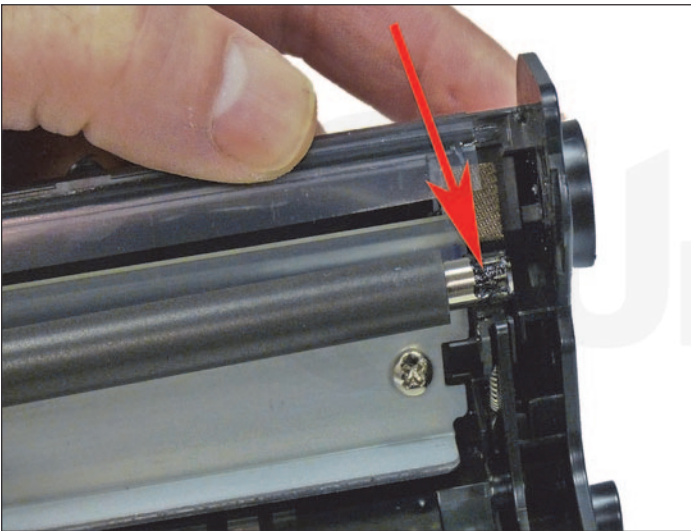

11. Re-install the cleaned PCR.

Note that a new OEM PCR has a small amount of conductive grease on the black (contact) side.

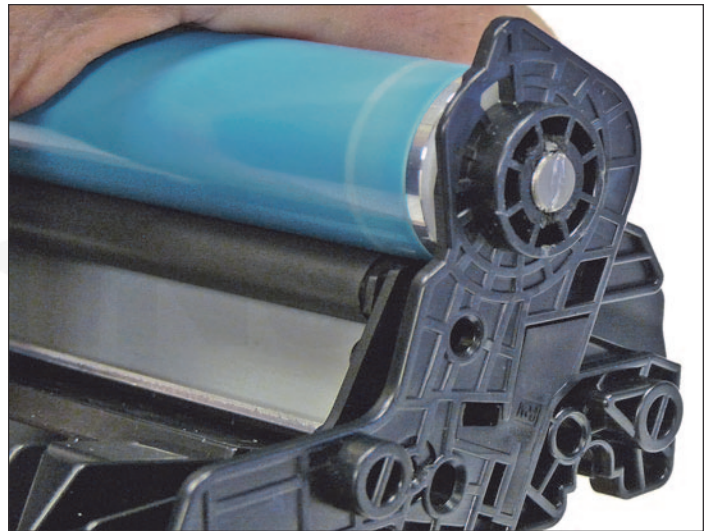


12. Re-Install the OEM OPC Drum and metal axle pin.

The metal axle pin should have a small amount of conductive grease on the tip.

Remove the old grease and replace before inserting the pin.

Make sure the axle pin is fully inserted.

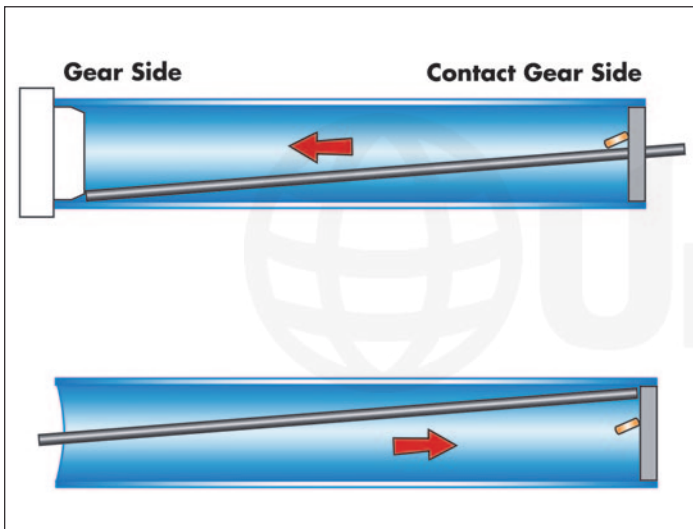

If you are replacing the OEM drum, follow this procedure to remove the gears and install them on the new drum.


13. Slide a 1/16" metal rod about 18" long along the drum wall until it meets the side wall of the dongle gear. Lightly tap the rod a few times with a hammer, rotate the drum, do the same until it comes loose. Normally it will take three to four taps for the gear to come loose. Do the same for the contact side taking care not to place the rod anywhere near the copper contacts that bite into the drum.



14. Straighten out the contacts on the contact gear.




15. Lightly sand the inside of the new drum where you will be installing the contact gear. This will help ensure good electrical contact.

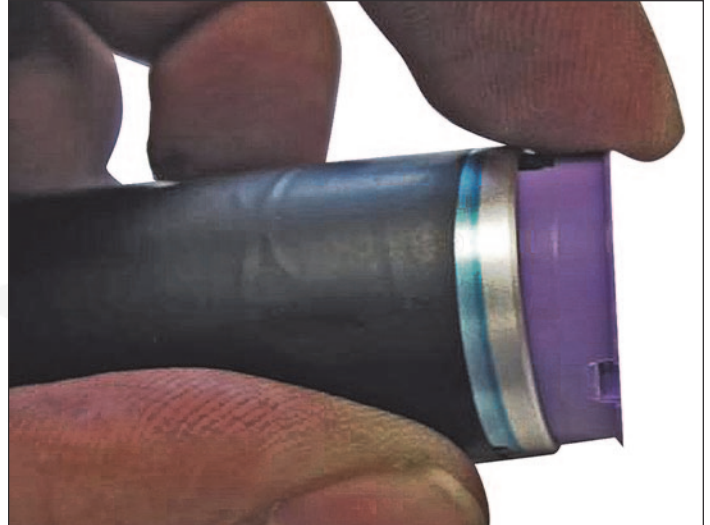

16. Apply a few drops of super glue around the inside of the new drum about 1/8" in from the edge. Make sure you leave space with no glue present for the contacts to touch the metal drum wall. These contacts must be metal to metal with no glue in between them. If any glue is in between the contacts and drum wall, there will be drum ground issues (solid black pages). Install the contact gear.




17. On the opposite side, place a few drops of medium or thick super glue on the inside wall of the drum about 1/8" in from the edge. This will prevent the glue from overflowing into the drum coating when the drive gear is installed.

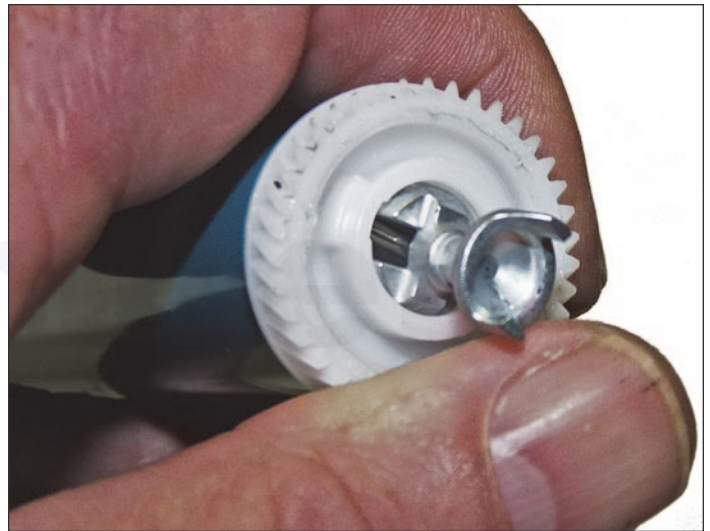


18. Install the drive gear. Place the drum onto a flat surface and gently tap the gear with a rubber mallet until the gear sits flush. Do not hit the dongle gear!




19. Check the drum ground with an ohmmeter. Place the probes into the drum contact and drum (very edge on the drum where there is no coating), and check for continuity. Be very careful to keep the one lead on the edge of the drum. The top metal part has a clear protective coating on it and is easily scratched. Do not press in hard or the lead will slide across the drum ruining it. Allow the glue to dry for about a couple of minutes and the drum should be ready to use.

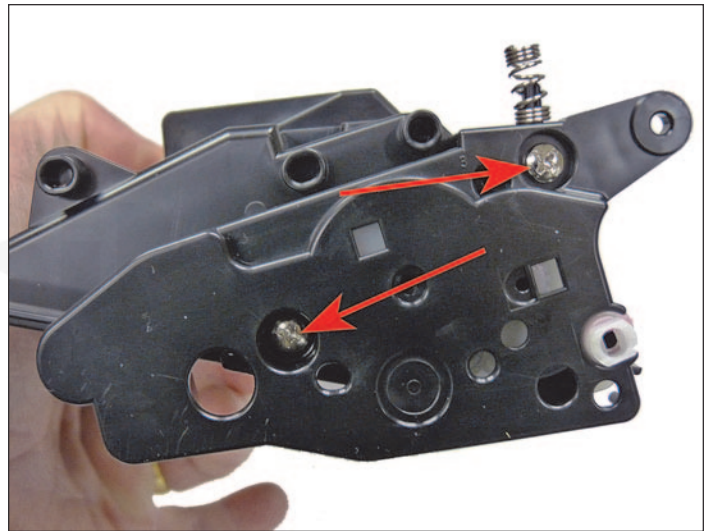


20. On the supply chamber, remove the two screws from the end cap on the gear side of the cartridge.

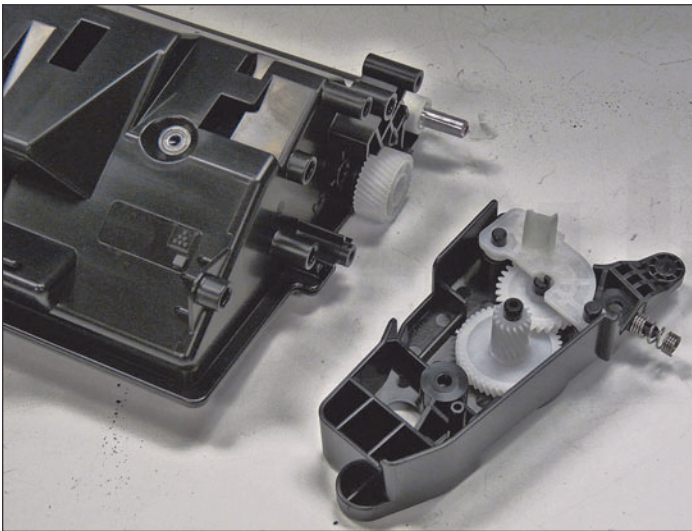

21. Remove the end cap.

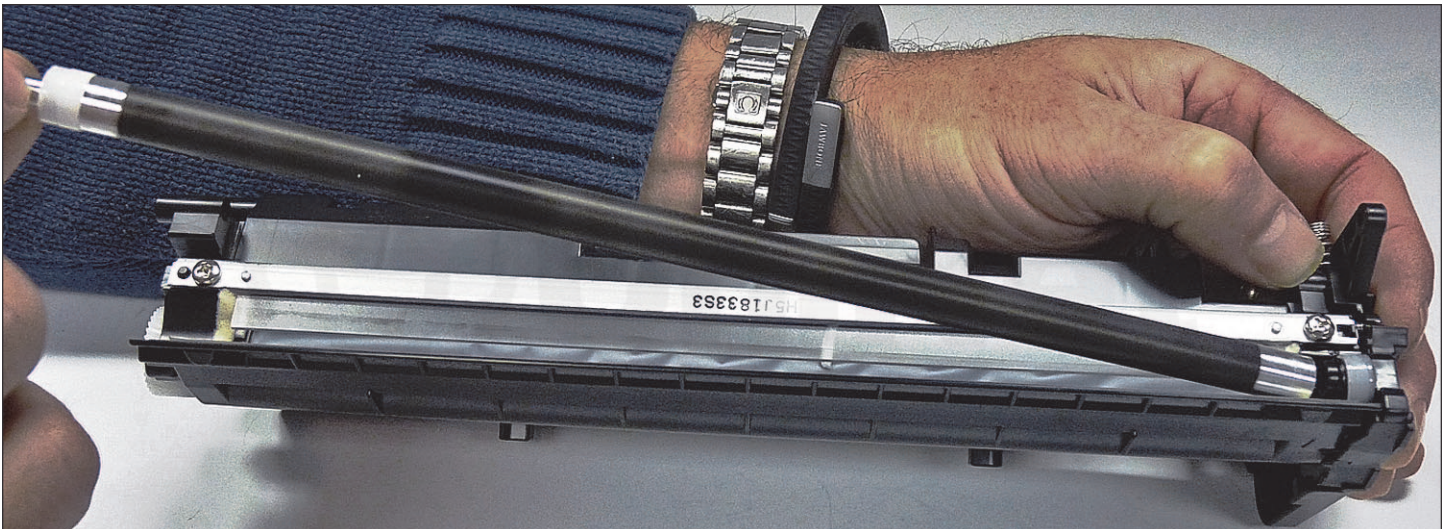


22. Remove the magnetic roller assembly.

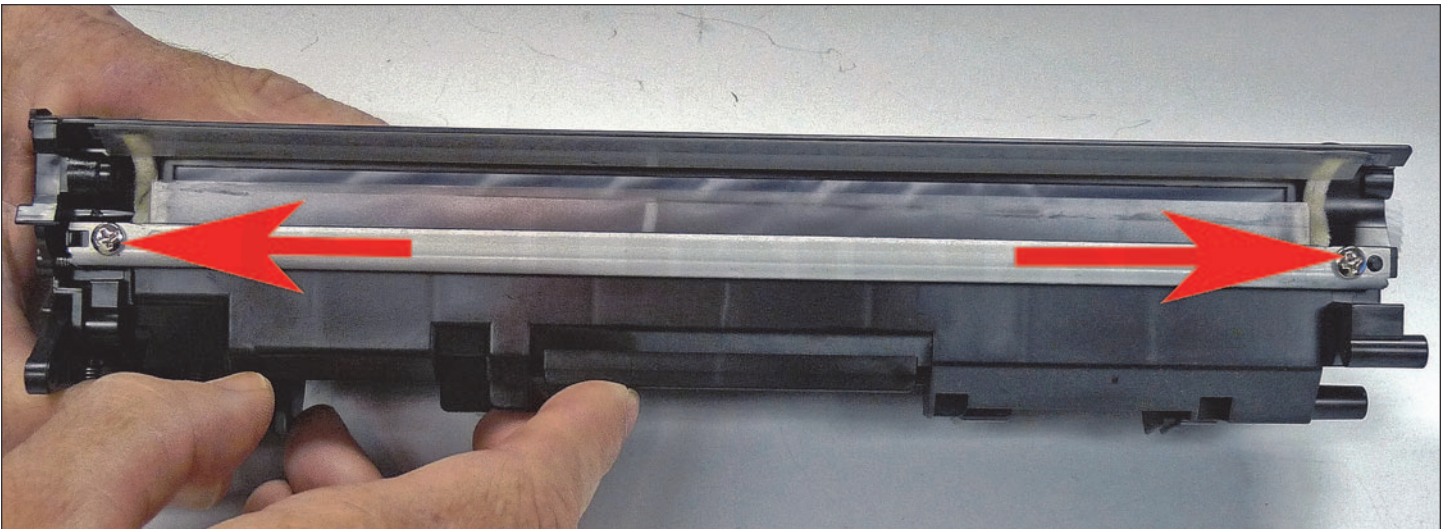

23. Remove the doctor blade and two screws.



24. Clean out any remaining toner from the hopper. Note the doctor blade seal. It is a sticky substance that can be clean with alcohol if toner gets on it. If this seal becomes damaged, replace it with 100% silicon caulk.

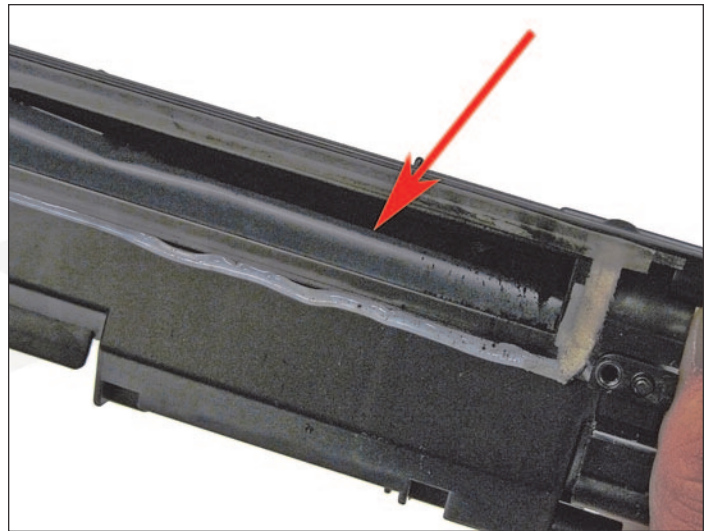


25. Remove the remnants of the old seal. These cartridges use a self-removing seal system. This picture shows a new cartridge with the seal starting to remove from right to left.


At this time no new seals are available.



26. Fill through the magnetic roller opening with the appropriate gram load of toner for use in the HP CF226A or X series toner cartridges. There is not a fill plug in these cartridges.

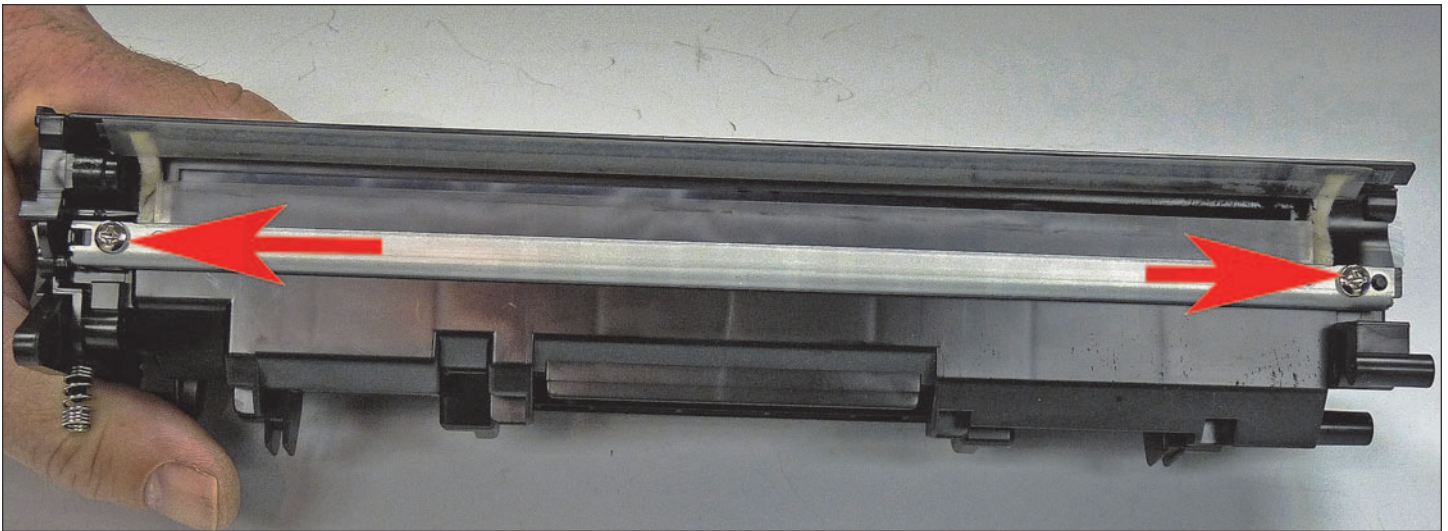

27. Re-install the doctor blade and two screws.

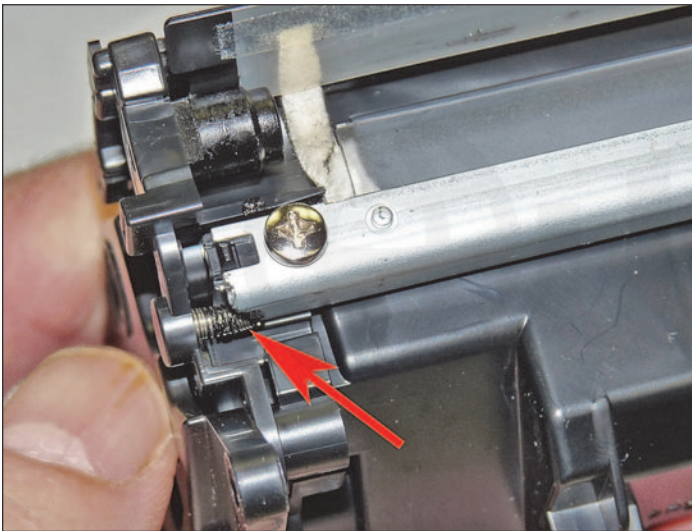


Make sure the contact spring is touching the blade!



This is a new type of contact for HP to use on this blade.



28. Install the magnetic roller. Turn the roller until the keyed end fits into the keyed slot in the end cap. This can be tricky to do until you get the hang of it. The keyed magnet is shown extended from the sleeve. The proper orientation for the keyed side is facing down.

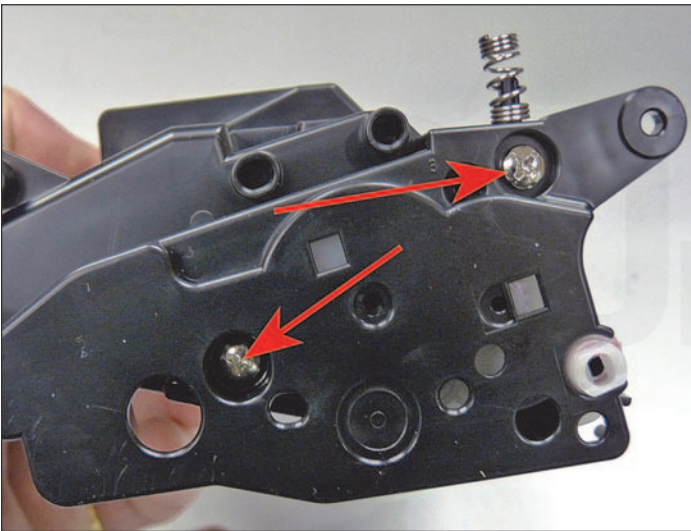


29. Install the end cap and two screws.

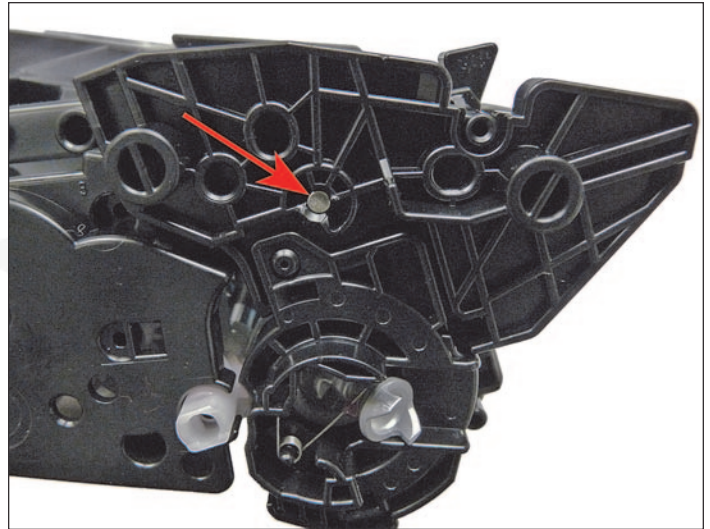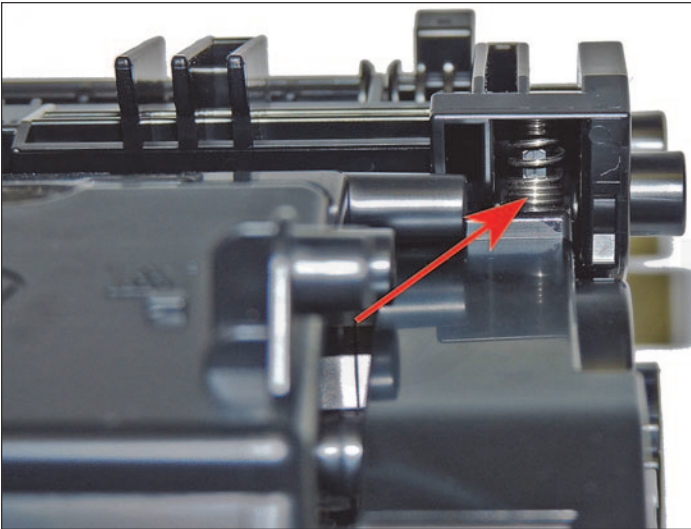


30. Place the two halves together, make sure that the two springs are aligned, and insert the two pins.

Make sure that the pins are slightly pushed in so that they do not interfere with installing the cartridge in the printer.

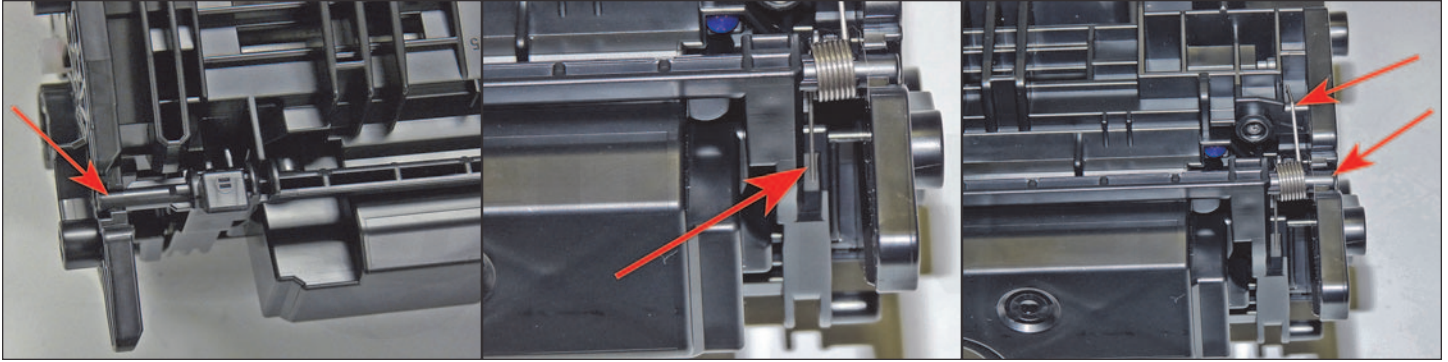

31. Install the drum cover.

Make sure the spring is situated correctly, and the slot on the cover fits into the tab on the cartridge.

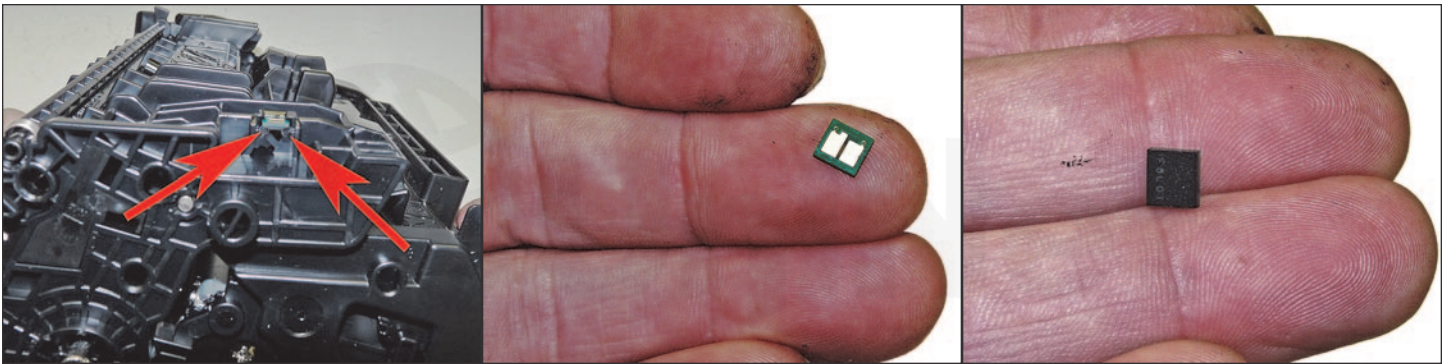

32. Replace the chip by slicing off the top two corners of melted plastic and sliding the chip out. After replacing the chip if it seems a little loose in the slot, place a dab of hot glue on each of the corners that you sliced off. The hot glue is easily removed when recycling the cartridge again, but will firmly hold the chip in place.