


XEROX® PHASER 3250

TONER CARTRIDGE REMANUFACTURING INSTRUCTIONS

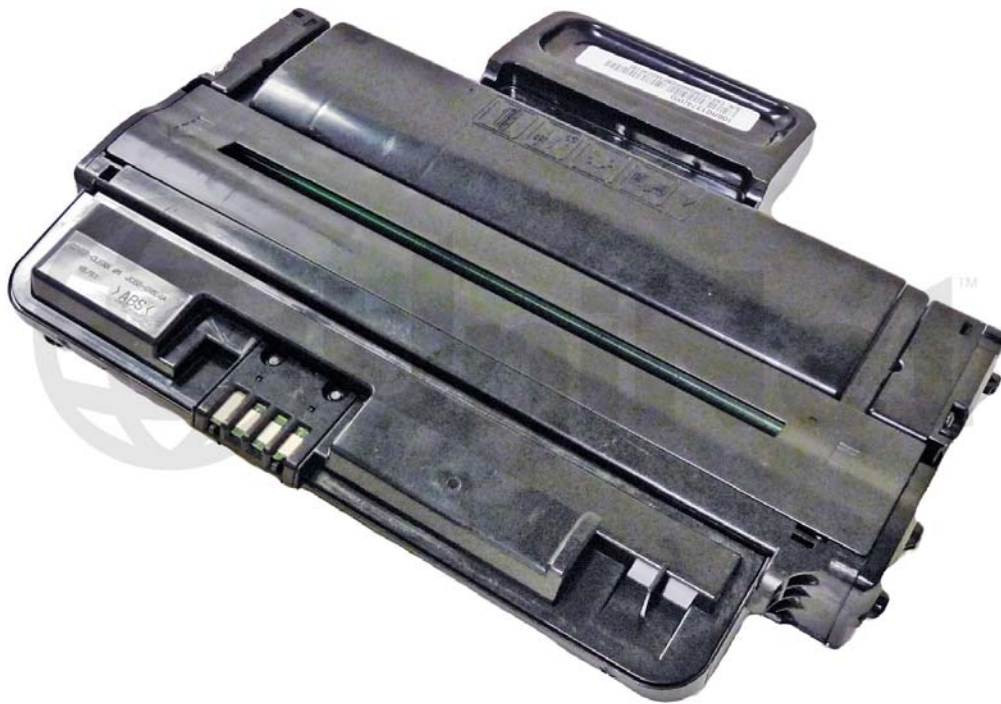

XEROX® PHASER 3250 TONER CARTRIDGE

REMANUFACTURING THE XEROX PHASER 3250 TONER CARTRIDGE

By Mike Josiah and the Technical Staff at UniNet

First released in January 2009 the Xerox Phaser 3250 printers are based on a 30 ppm engine with a maximum resolution of 1200dpi. The first page out is stated to be under 8.5 seconds, and the printer comes standard with 32MB of memory (expandable to 160MB). Depending on the model number, duplexing and a network card are built-in.



These cartridges do not have a drum cover and come new with a piece of heavy paper taped around the cartridge as pictured above. All new cartridges opened so far have shown some toner leakage on the drum that would have shown on any prints for at least a few pages.

The standard cartridge (Xerox part# 106R01373) is rated for 3,500 pages. The HY cartridge (Xerox part# 106R01374) is rated for 5,000 pages. As with pretty much all cartridges these days the cartridge has a chip and it has to be replaced each cycle.

The 106R01373 has a list price of \$88.99 and the 106R01374 has a list price of \$105.99.*

There are two printers available in this series: the 3250/D (\$279.00* list) and the 3250/DN \$349.00* list).

*Pricing in U.S. dollars, as of March 2009.



Cartridge troubleshooting will be listed at the end of these instructions.

REQUIRED TOOLS

1. Toner approved vacuum
2. A small common screwdriver
3. A Phillips head screwdriver
4. Needle nose pliers


REQUIRED SUPPLIES

1. Phaser 3250 toner
2. New replacement chip
3. Conductive grease
4. 99% isopropyl alcohol
5. Drum lubricating powder

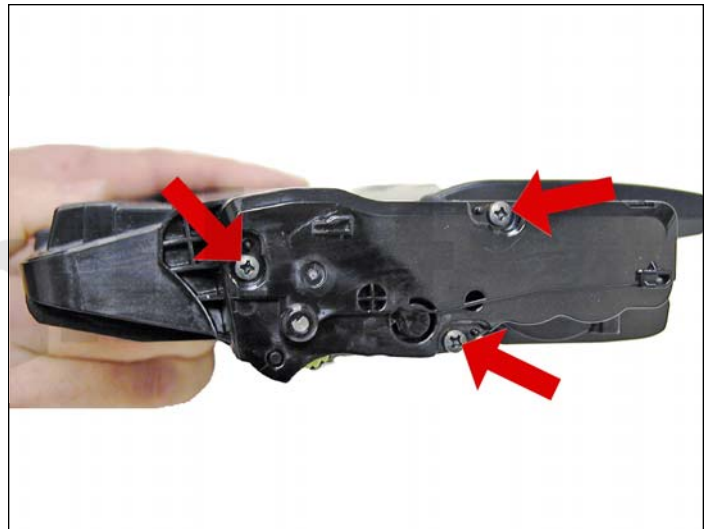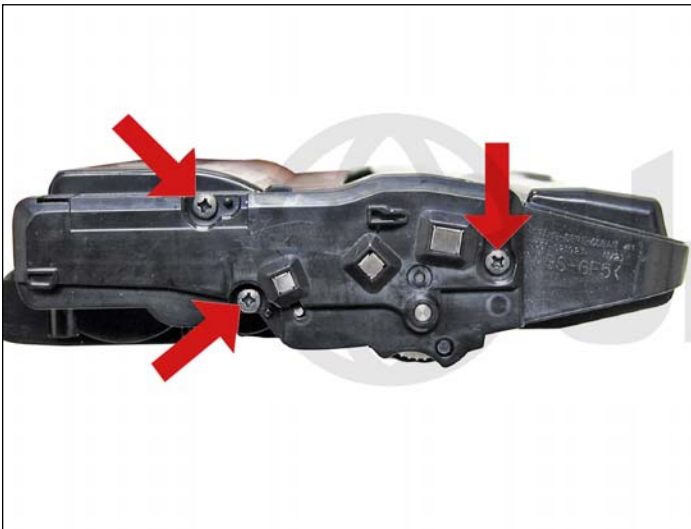

1. Place the cartridge with the handle up facing towards you. Remove the three screws from the right side end cap. Leave the end cap in place for now.

2. On the left side end cap, remove the three screws.

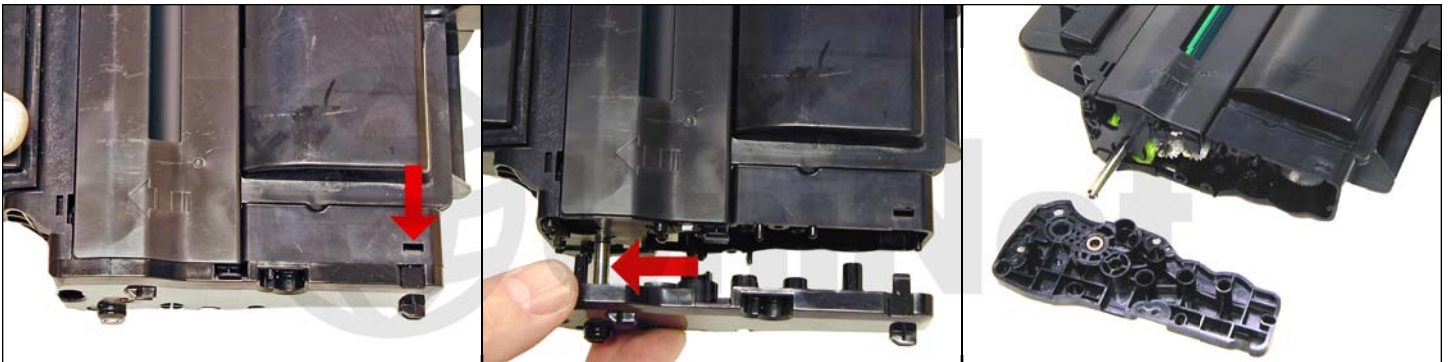

3. While still on the left end cap, locate the top tab. Press in on the tab and remove the end cap.

The drum axle may come out with the end cap. Separate the two.




4. On the right side end cap, press in on the top tab and remove the end cap.



5. Separate the two halves slightly and lift off the middle top cover.

UniNet™

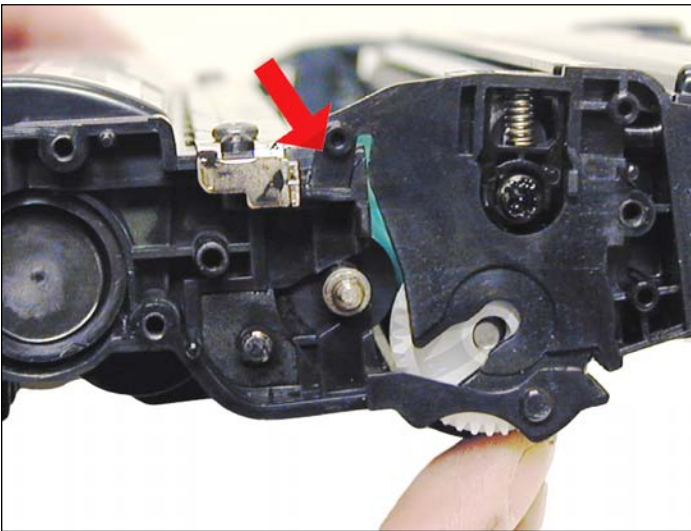

6. Lift up on the drum/waste hopper and remove.

If the drum axle came loose, be careful to hold the drum so it does not become damaged.

Remove the drum/waste assembly.



7. Remove the drum axle from the large gear side of the waste assembly.


Remove the drum.



8. Remove the PCR from the assembly.




9. Remove the PCR cleaning roller. Clean the PCR with your normal PCR cleaner. **WARNING:** Do not clean the OEM PCR with alcohol, as this will remove the conductive coating from the roller. If the PCR is an aftermarket, follow the cleaning methods recommended by the manufacturer. If the PCR is an OEM, we recommend it be cleaned with your standard PCR cleaner.

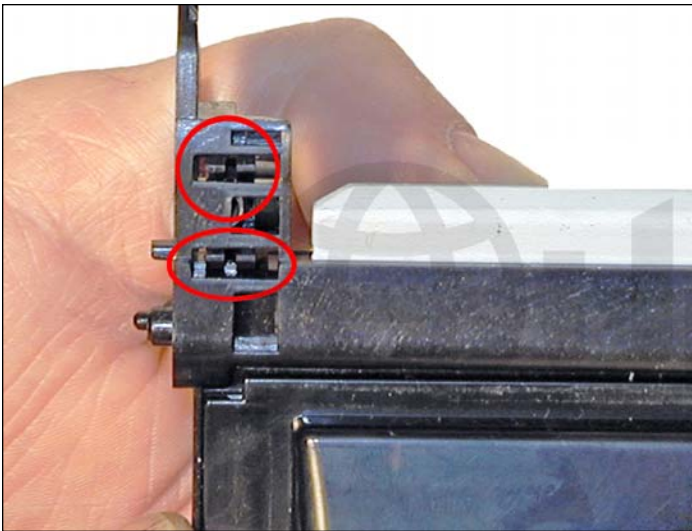

10. Remove both the PCR holders by pressing in on the tabs at the bottom of the holder.


These holders need to be removed to allow access to the wiper blade.

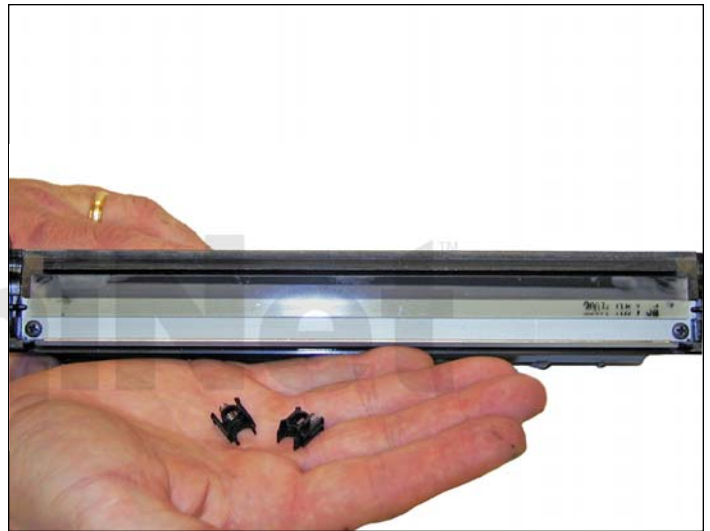




11. Remove the two screws from the wiper blade.

Remove the blade.

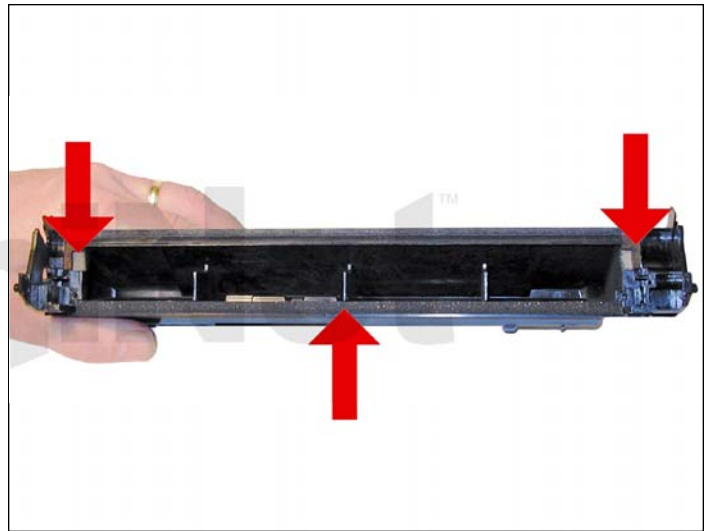


12. Clean out all the waste toner from the hopper.

Make sure the seal are clean.

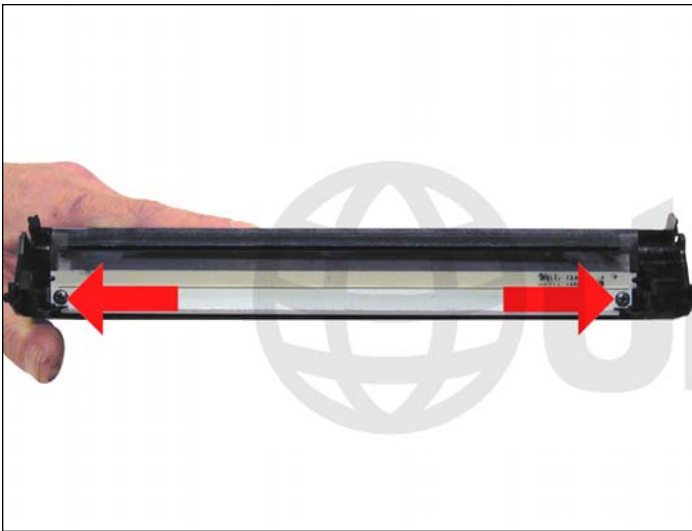

13. Install the cleaned or new wiper blade and two screws.

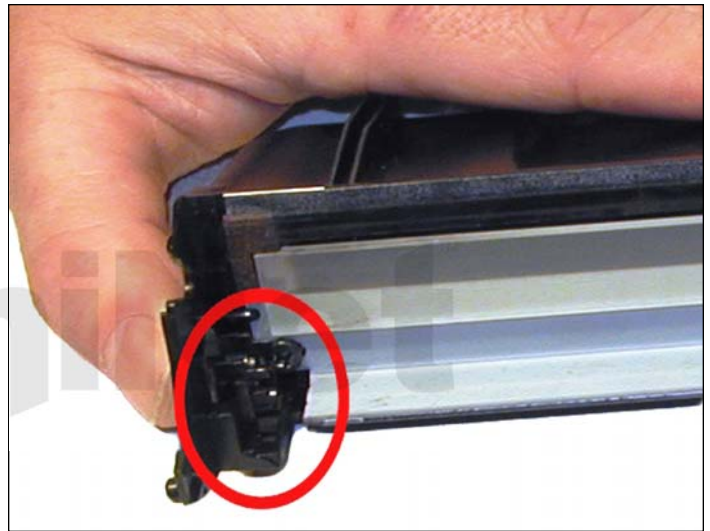


14. Install the two PCR holders.



15. Blow off or vacuum the PCR cleaning roller.
Install in the waste hopper.




16. Place a small amount of conductive grease in the holders
and install the PCR.

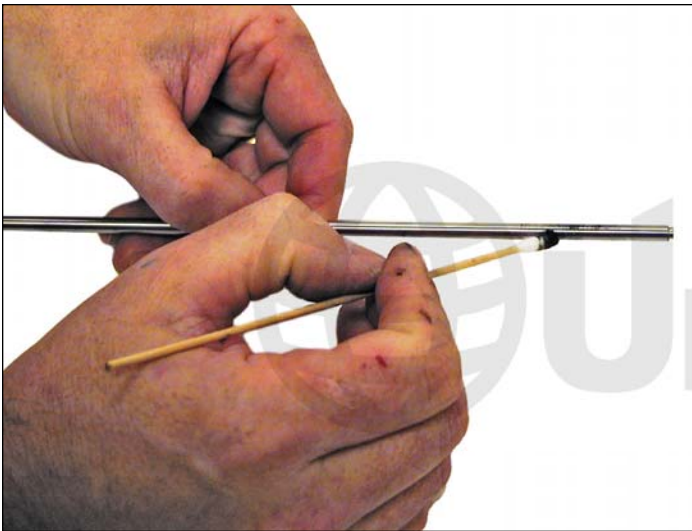

17. The large gear side of the drum axle shaft has conductive
grease on it. Regardless of whether you are replacing the drum
or not, clean the old grease off and replace with new.



18. Install the drum and axle from the small gear side of the
drum into the waste hopper. Make sure the keyed end of the
shaft is on the large gear side.

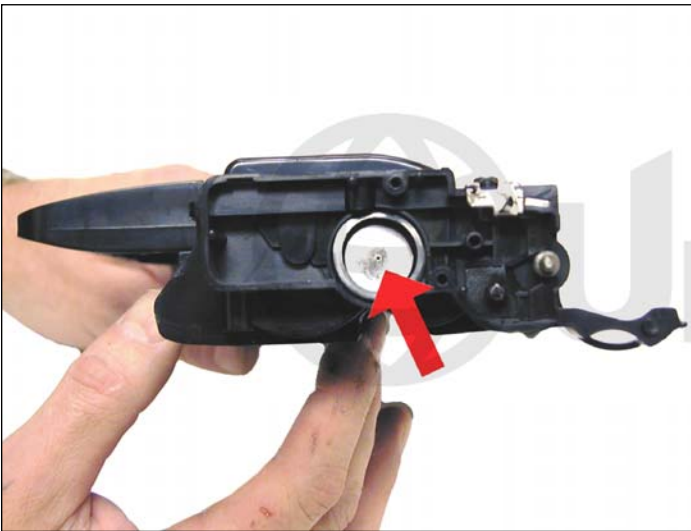


19. On the supply hopper, carefully pry out the fill plug and dump out any remaining toner. The fill plug can be difficult to remove as it is recessed. Take a small common screwdriver and work it around the edge lifting slightly until it comes loose.



20. Remove the developer roller.




21. Remove the two screws from the doctor blade. Remove the blade. Clean out all the remaining toner from the hopper.

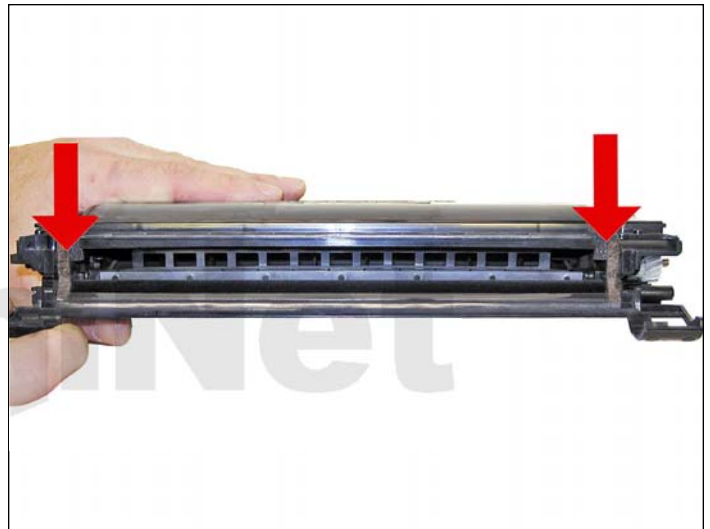

22. Make sure the doctor blade sealing foam and the developer roller seals are clean and intact.



23. Clean the doctor blade edge so there is no evidence of build up along the edge. If any buildup exists, the cartridge will streak. No chemicals should be used. We have found using a clean ice cream type wooden stick works great for scraping the blade clean without damaging it.

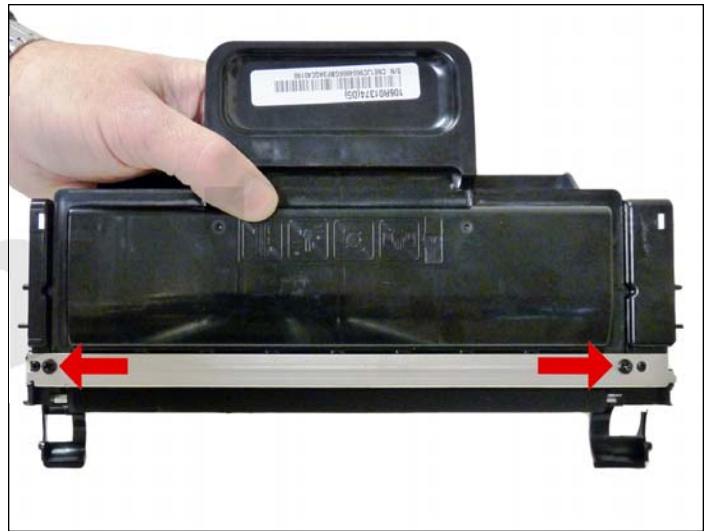

24. Install the doctor blade and two screws.




25. Clean the developer roller with a dedicated DVR cleaner and replace into the hopper.




26. Fill the hopper with Phaser 3250 toner.


Replace the fill plug and check for leaks.

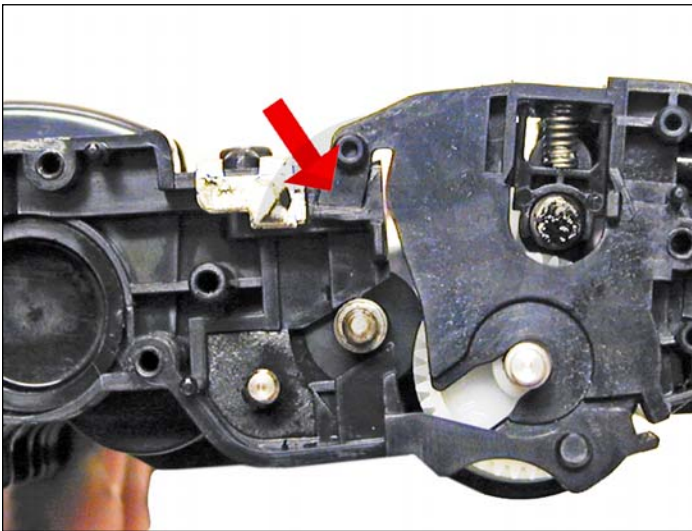

27. Fit both sides of the waste hopper tabs into the toner hopper.

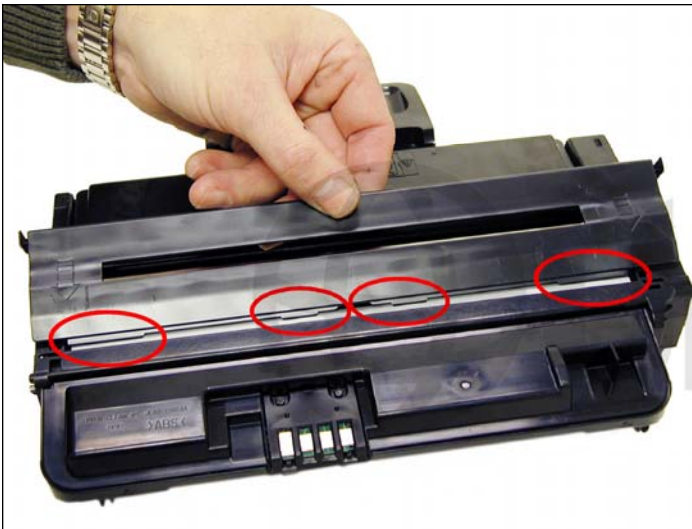


28. Slide the middle top cover/PCR assembly into place.
Make sure all the middle tabs fit under the edge of the waste hopper.


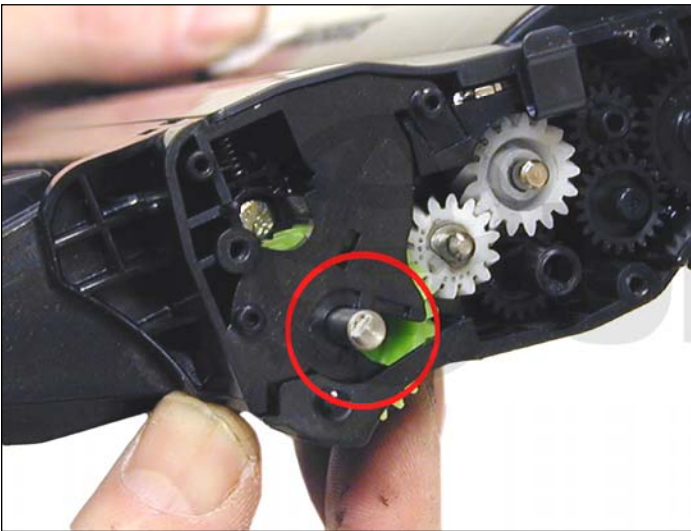


29. Clean the contacts on the left side end cap, and replace the conductive grease.

Align the drum axle keyed end so it will fit into the keyed slot of the end cap. Snap the end cap into place.

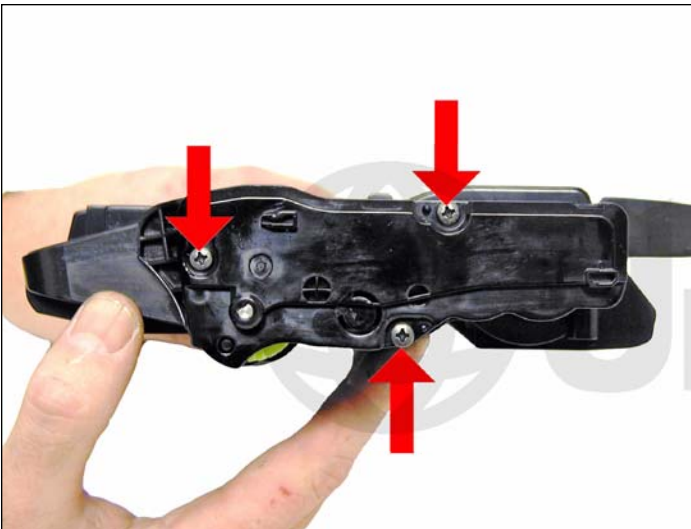


30. Install the three screws into the end cap.

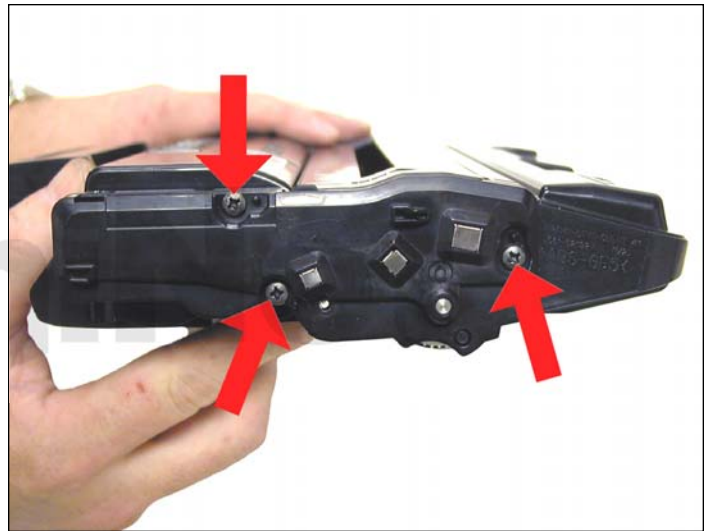
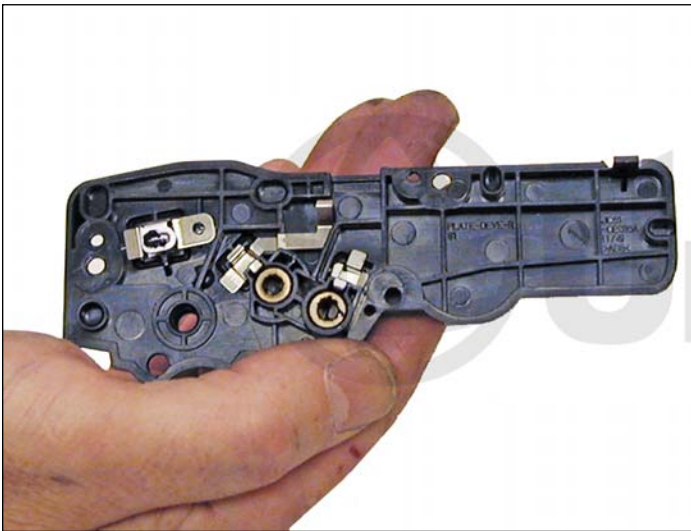


31. Clean the contacts on the right side end cap and replace the conductive grease.

Snap the end cap into place and replace the three screws.

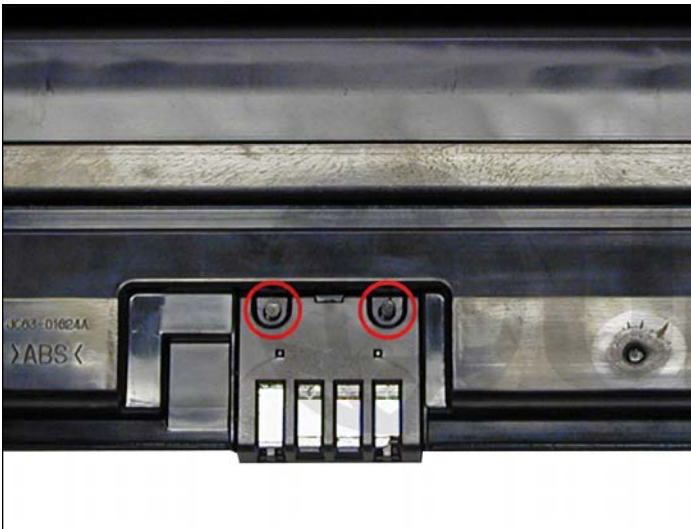

32. To replace the chip, drill out the two plastic rivets with a small drill. Remove the cover and chip.

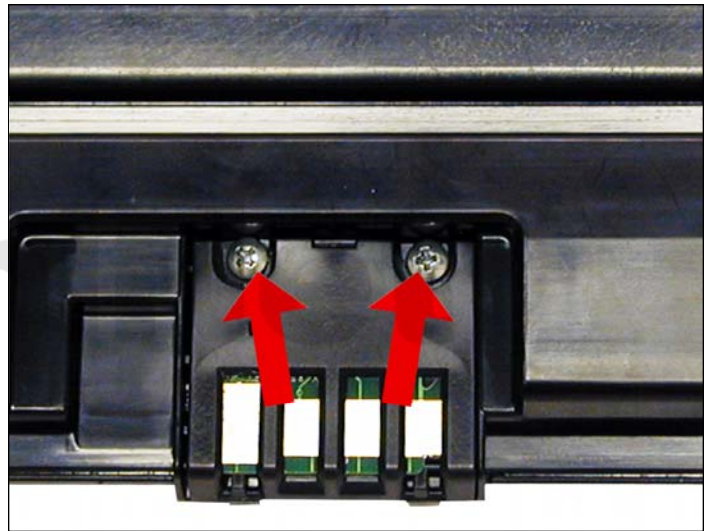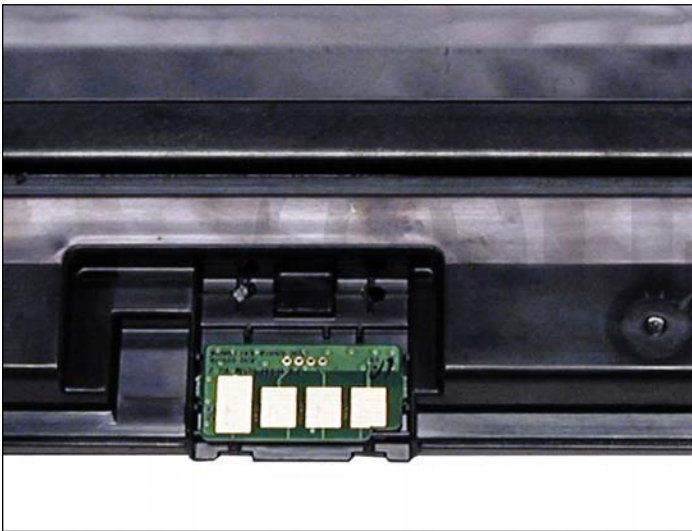

33. Install the new chip and cover. Insert the two small screws that correspond to the holes drilled to hold everything in place.

REPETITIVE DEFECT CHART

Upper heat roller	77.6mm
OPC drum	75.5mm
Lower pressure roller (1st)	62.8mm
Lower pressure roller (2nd)	37.7mm
Supply roller	47.1mm
Transfer roller	47.0mm
Developer roller	35.2mm
PCR	26.7mm